




INKJET CARTRIDGES +

Refill Instructions - HP CC643EE (No.300)

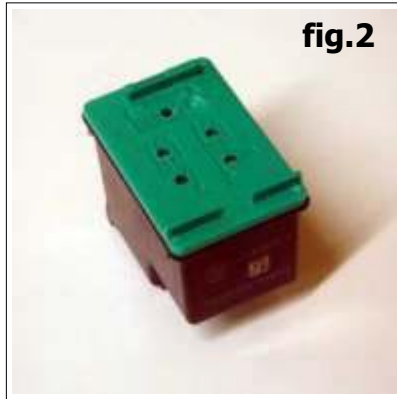

HP DeskJet D2500 HP DeskJet D2560 HP DeskJet D2563
HP DeskJet F4240 HP DeskJet F4272 HP DeskJet F4275
HP DeskJet F4280 HP DeskJet F4283

Items Required

Original HP 300 Cartridge, Syringe, Drill Bit & Filling Tube Cyan Ink 5ml, Magenta Ink 5ml, Yellow Ink 5ml

Instructions

1. The filler holes are located under the coloured top of the cartridge (fig.1)

2. Peel label back on top of cartridge.(fig.2)

3. Assemble syringe and steel filling tube and fill with appropriate colour ink.

4. Insert the steel filling tube into the appropriate filling holes. (fig.3,4 & 5). Push down into centre of the sponge.

IMPORTANT: Cartridge contains a sponge and a slight resistant may be felt.

5. **SLOWLY** Inject ink. When ink overflows from filling hole or starts to leak from print heads cartridge is full. Stop injecting immediately.

Blot printer heads with tissue before continuing to fill next colour.

IMPORTANT: Clean syringe with water and dry before refilling next colour.

6. After refilling replace label back over filling hole.

7. Leave the cartridge to stand overnight on non-absorbent surface this will ensure no leakage and give the ink time to fully saturate the sponge.

IMPORTANT: DO NOT LEAVE ON TISSUE.

8. Install cartridge and run a priming cycle.

PLEASE NOTE: The ink indicator level may need to be turned off. Check your HP instructions manual for details.

